


INDOOR CONVEX MIRROR BRACKETS

Installation Instructions

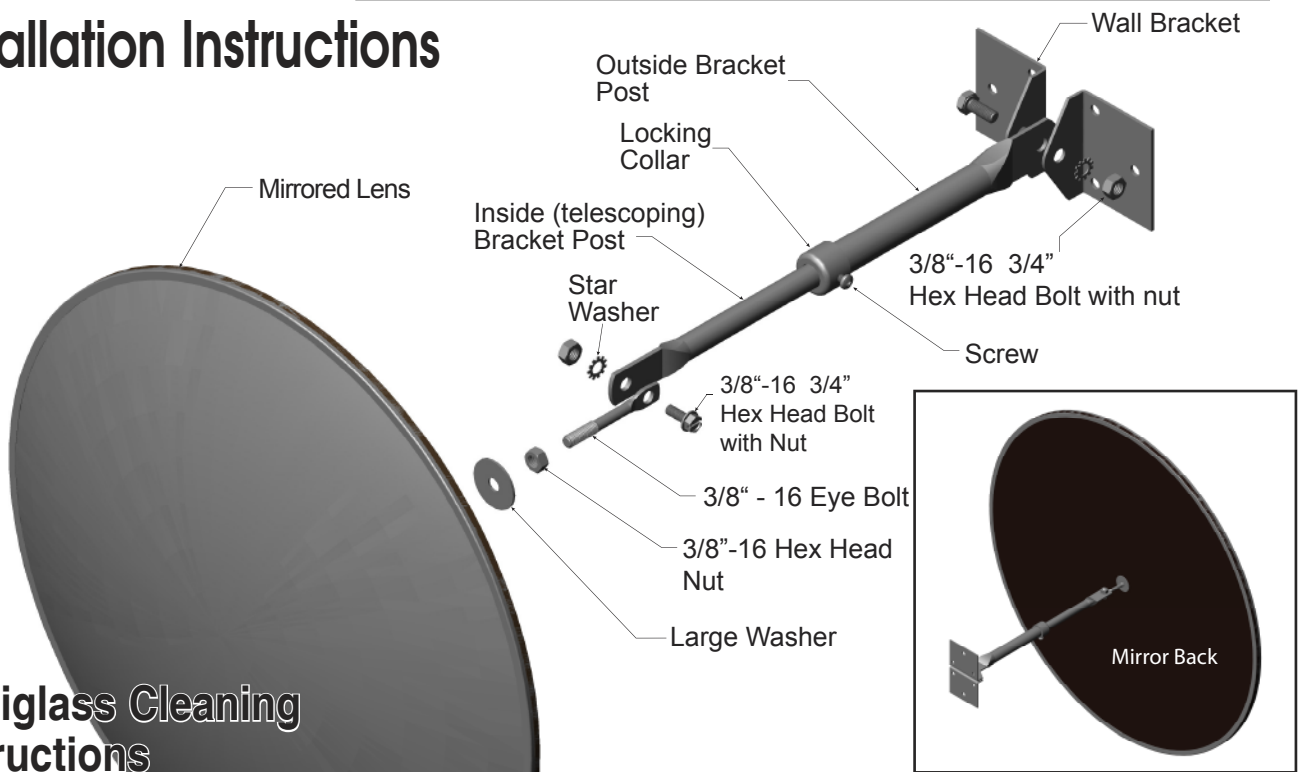

Plexiglass Cleaning Instructions

- Dusting...** Dust with a soft, damp cloth, wiping gently.
- Washing...** Wash with mild soap or plain water.
- Polishing...** Use a wax based furniture polish.

DO NOT USE WINDOW CLEANING FLUIDS, GRITTY CLOTHS, OR ANY STRONG CHEMICALS.

Mirror Back shows Ball Stud & Washer installed into hole in Heavy Metal Plate under Back Plate.


Note: The Heavy Metal Plate can not be seen through back plate.

Model CVI (Bracket for Indoor Units):
Uses 1 Bracket per Convex Mirror

1. **Make sure the bracket is assembled as shown in the diagrams above.**
2. Loosen the Hex Head Bolts holding the Ball Stud Locking Plate; position the washer on the end of the Ball Stud, and screw it into the hole on the Mirror back plate. (Secure it tightly with pliers or vice grips).
3. Loosen the screw on the Locking Collar and slide the Inside (telescoping) Bracket Post in or out to the desired position. Make sure the Screw aligns with the hole in the Outside Bracket Post and tighten to hold the post in place (**Note:** Shorter bracket positions are possible by cutting the Inside Bracket Post with a hacksaw).
4. Arrange the mirror and bracket to the desired position, and **Tighten All of the Hex Bolts to Secure.**
5. All Mirrors should be securely mounted to wood or metal substrates, and should not be mounted to drywall without additional support. (Hardware depends on wall surface) Fasteners are not included.

For 12" & 18" Mirrors

1. Attach Offset Bracket B to Wall or Post.
2. Attach Mirror A to Bracket B, and Adjust Angle.
3. Tighten Screws on Ball Bracket to Fix Mirror in Desired Position.

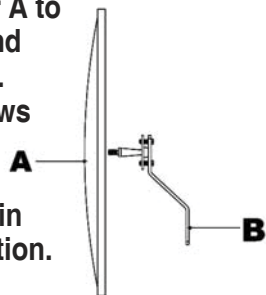

Made in U.S.A.

