


Roundtangle Convex Brackets

INSTALLATION INSTRUCTIONS

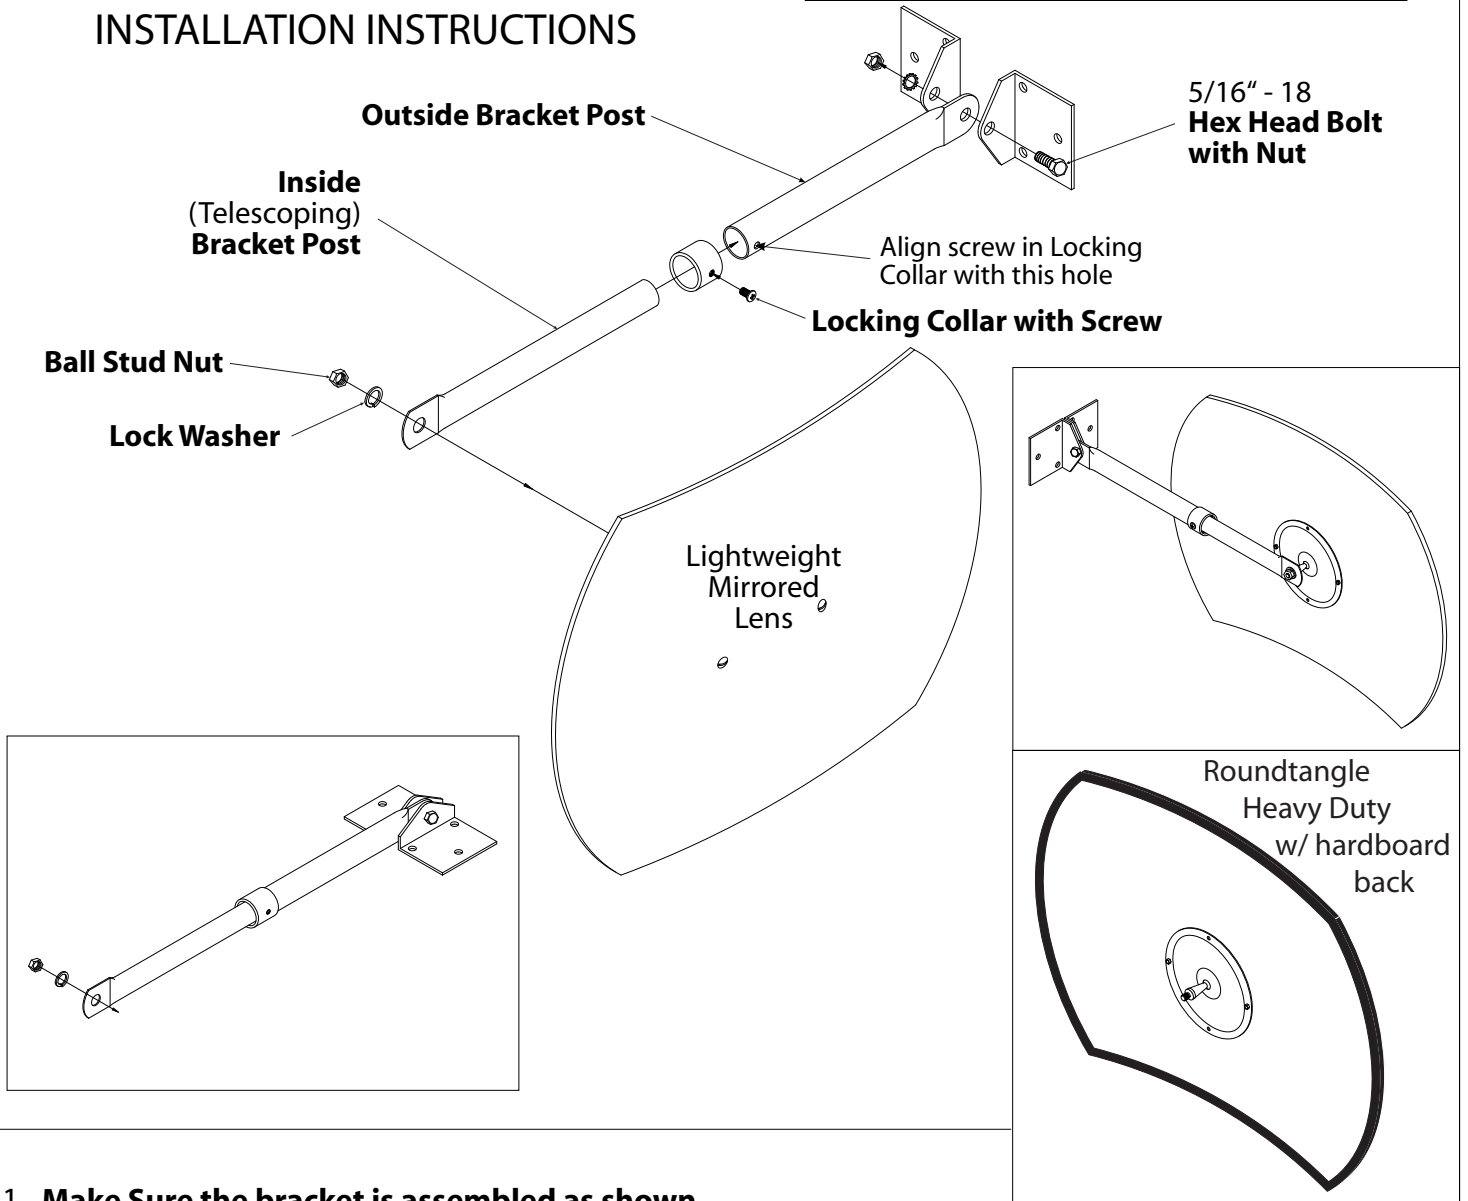

1. **Make Sure the bracket is assembled as shown in the diagrams above**
2. Insert the threaded end of the swivel mount bracket through the hole at the end of the mounting tube. Tighten the nut with pliers or a wrench.
3. Loosen the screw on the locking Collar and slide the inside (telescoping) bracket post in or out to the desired position. Make sure the screw aligns with the hole in the outside bracket post and tighten to hold the post in place. (**Note:** Shorter bracket positions are possible by cutting the inside bracket post with a hacksaw)
4. Loosen the screws on the swivel back, then Position mirror to desired angle. Once in position, tighten screws to maintain angle.
5. Arrange the mirror and bracket to the desired position and **Tighten ALL of the hex bolts to secure.**
6. All mirrors should be securely mounted to wood or metal substrates, and should not be mounted to drywall without additional support. (Hardware depends on wall surface) fasteners are not included.

Made in U.S.A.

